

Maintenance item No.	Description																
U245	<p>Checking messages</p> <p>Description Displays a list of messages on the operation panel.</p> <p>Purpose To check the messages to be displayed.</p> <p>Method</p> <ol style="list-style-type: none">1. Press the start key.2. Select the item to be displayed.3. Displays the message one by one using zoom +/- keys. When a message number is entered with the numeric keys and then the start key is pressed, the message corresponding the specified number is displayed. <p>Completion Press the stop/clear key. The screen for selecting a maintenance item No. is displayed.</p>																
U250	<p>Setting the maintenance cycle</p> <p>Description Displays and changes the maintenance cycle.</p> <p>Purpose To check and change the maintenance cycle.</p> <p>Method</p> <ol style="list-style-type: none">1. Press the start key.2. Select the item using the exposure adjustment keys. <table><tr><th>Exposure indicator</th><th>Description</th><th>Setting range</th><th>Initial setting</th></tr><tr><td>Exp. 1</td><td>First 3 digits</td><td>000 to 999</td><td>150</td></tr><tr><td>Exp. 2</td><td>Last 3 digits</td><td>000 to 999</td><td>000</td></tr></table> <ol style="list-style-type: none">3. Change the setting using the numeric or zoom +/- keys.4. Press the start key. The value is set. <p>Completion Press the stop/clear key. The screen for selecting a maintenance item No. is displayed.</p>	Exposure indicator	Description	Setting range	Initial setting	Exp. 1	First 3 digits	000 to 999	150	Exp. 2	Last 3 digits	000 to 999	000				
Exposure indicator	Description	Setting range	Initial setting														
Exp. 1	First 3 digits	000 to 999	150														
Exp. 2	Last 3 digits	000 to 999	000														
U251	<p>Checking/clearing the maintenance count</p> <p>Description Displays, clears and changes the maintenance count.</p> <p>Purpose To check the maintenance count. Also to clear the count during maintenance service.</p> <p>Method</p> <ol style="list-style-type: none">1. Press the start key.2. Select the item using the exposure adjustment keys. <table><tr><th>Exposure indicator</th><th>Description</th><th>Setting range</th><th>Initial setting</th></tr><tr><td>Exp. 1</td><td>First 3 digits</td><td>000 to 999</td><td>000</td></tr><tr><td>Exp. 2</td><td>Last 3 digits</td><td>000 to 999</td><td>000</td></tr><tr><td>Exp. 3</td><td>Clearing the count</td><td>-</td><td>-</td></tr></table> <p>Clearing</p> <ol style="list-style-type: none">1. Light exp. 3.2. Press the start key. The count is cleared. <p>Setting</p> <ol style="list-style-type: none">1. Change the count using the numeric or zoom +/- keys.2. Press the start key. The count is set. <p>Completion Press the stop/clear key. The screen for selecting a maintenance item No. is displayed.</p>	Exposure indicator	Description	Setting range	Initial setting	Exp. 1	First 3 digits	000 to 999	000	Exp. 2	Last 3 digits	000 to 999	000	Exp. 3	Clearing the count	-	-
Exposure indicator	Description	Setting range	Initial setting														
Exp. 1	First 3 digits	000 to 999	000														
Exp. 2	Last 3 digits	000 to 999	000														
Exp. 3	Clearing the count	-	-														